

TROUBLESHOOTING

SYMPTOM	SOLUTION
No dial tone	<ul style="list-style-type: none">• Check to see if the handset battery pack is connected inside the handset battery compartment.• Make sure that the adaptor plug is connected to the base unit.• Check for the telephone line cord connections. Ensure that both connectors are plugged securely on the jacks.• Test the phone at a different telephone wall jack and listen for a dial tone.• Test a different phone in the wall jack and listen for a dial tone.
Will not ring	<ul style="list-style-type: none">• The phone or another phone connected to the same line may be in the off-hook (IN USE) position.• Try a different phone, if the problem still exists, the fault is not with the unit.
Static	<ul style="list-style-type: none">• The rechargeable battery pack might be weak. Allow the rechargeable battery pack to charge fully before using.• Try a different phone, if the problem still exists, the fault is not with the unit.• Some atmospheric conditions such as very low humidity can cause static build-up.
Cannot dial out	<ul style="list-style-type: none">• Press the TALK button on the handset and listen for a dial tone before dialing out.• Are you in a rotary only area? Set the TONE/PULSE switch to PULSE.• Try a different phone in the jack. If the problem persists, the fault is not in the unit.• Is the phone connected to an answering machine? Disconnect the answering machine and try to have the phone plugged into the jack alone. If it works alone, there is a compatibility problem. Purchase a 2 for 1 adaptor at any phone or electrical supply store. Plug the 2 for 1 adaptor into the modular wall jack, and then plug the phone into one side and the answering machine on the other side of the adaptor.
Memory feature does not work	<ul style="list-style-type: none">• Make sure that the unit is in the standby mode before storing a phone number.• The maximum number of digits that you can store for each memory location is 32 digits. See the "Memory Dialing" section for more details.
No link between the base and handset	<ul style="list-style-type: none">• You may have taken the handset at a distance away from the base that is beyond its normal operating range. Refer to the section of "Operating Range" in the manual for more details.

AC ADAPTOR: USE ONLY WITH CLASS 2 POWER SOURCE, RATED OUTPUT 6VDC, 200mA.



THIS SYMBOL IS INTENDED TO ALERT THE USER OF THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE OWNER'S MANUAL.

Operating Manual



CLT-777

Cordless Caller ID Phone

BLUEsky



IMPORTANT SERVICE INFORMATION

Read this manual before attempting to setup or use this instrument. It contains important information regarding safe installation and use. Keep this manual for future reference. Also save the carton, packing and proof of purchase to simplify and accelerate any needed assistance.



WARNING

To prevent fire or shock hazard, do not expose this product to rain or any type of excess moisture.

If accidentally dropped into water, the DC adaptor should immediately be unplugged from the wall along with the telephone line cord.



THIS SYMBOL IS INTENDED TO ALERT THE USER OF THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE OWNER'S MANUAL.

CLT-777 CARTON CONTENTS

- CLT-999 Base Unit
- Cordless Handset
- Rechargeable Battery Pack
- Telephone Line Cord
- DC Adaptor (DC 6V 200mA)
- User's Manual

Improving Cordless Reception

Follow these guidelines to improve cordless sound quality:

1. Select an area to install the unit where it is closest to the center of your home or office. This will improve the operating range of the unit.
2. Keep the unit base away from electrical equipment. Radio Frequency Interference (RFI) is sometimes generated by these appliances, which can cause degradation in cordless reception.
3. Keep the handset battery pack charged as much as possible. Weak handset battery pack can limit the range of cordless operation.



MAINTENANCE

Your phone should be situated away from heat sources such as radiators, heaters, stoves or any other appliance that produces heat.

CLEANING THE UNIT

Use a slightly damp cloth to clean the plastic cabinet. Never use polish, solvents, abrasives or strong detergents since these can damage the finish.

CHARGING

1. Make sure the AC adaptor and telephone line cord is connected to the unit.
2. Place the handset back to the base . The CHARGE LED indicator on the base will steadily light up.
3. Leave the handset on the base for 12 hours continuously to get a maximum charge. The unit is now ready for regular use.

HOME AREA CODE

In standby mode, enter digits as follows:

* **7 6 # # X**, then press and hold the SET button 2 seconds.

NOTE: X = area code

The first digit 0 should be ignored while setting the area code (ie. Set 2 for Taipei, 7 for Kaohsiung)

BLOCKING CALLS

You can set your phone in blocking call mode within desired times (from 1 to 12 hours),

In standby mode, enter the digits as below:

* * **5 X # #**, then press and hold the SET button 2 seconds.

Note: X = the digit from 0-9, * and #.

0 is 10 hours, * is 11 hours, # is 12 hours.

In blocking call mode, the ringer will not function. However, the numbers will be displayed.

65,000 COMBINATION SECURITY CODING

The unit has 65,000 possible security code combinations to prevent unauthorized use of your telephone line by other cordless phones nearby.

OUT OF RANGE DETECTION

The unit is equipped with an Out-of-Range detection system. If you have the handset too far away from the base unit during a call, the handset may lose its link with the base unit. When this happens, the handset emits a beeping sound every second to warn you that the background noise level is too high for proper communication between the handset and the base unit. When you hear this sound, you should move closer to the base unit to reduce the noise level. Otherwise, the call will automatically cut off.

TECHNICAL INFORMATION

This cordless phone uses radio frequencies to allow mobility. There are certain difficulties in using radio frequencies with a cordless telephone. While these are normal, the following could affect the operation of your system.

Noise: Electric pulse noise is present in most homes at one time or another. This noise is most intense during electrical storms. Certain kinds of electrical equipment such as light dimmers, fluorescent bulbs, motors, and fans also generate noise pulses. Because radio frequencies are susceptible to these noise pulses, you may occasionally hear them in your handset. Generally they are a minor annoyance and should not be interpreted as a defect in your system.

Range: Because radio frequencies are used, location of the base unit can affect operating range. Try several locations in your home or business and pick the one that gives you the clearest signal.

Interference: Some electronic devices operate in and/or generate interference near the operating frequencies of your cordless telephone. While several protection circuits are used to prevent unwanted signals, there may be periods when these unwanted signals cause interference. If interference occurs frequently, it can be minimized or eliminated by lowering the height of your base antenna or by relocating the base unit. You can check for interference before selecting the final base unit location by plugging in the phone.

SAVE THESE INSTRUCTIONS



IMPORTANT SAFETY

INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating. These openings should never be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surfaces. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local Power Company.
8. Do not allow anything to rest on the power cord. Do not locate this product where people will step on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service contractor when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustments of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinctive change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS



INSTALLATION PRECAUTIONS

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch un-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.



MAINTENANCE

1. Use a damp cloth to clean the plastic cabinet. A mild soap will help to remove grease or oil. Never use polish, solvents, abrasives or strong detergents since these can damage the finish.
2. Your phone should be situated away from heat sources such as radiators, heaters, stoves or any other appliance that produces heat.



BATTERY SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of fire or injury to persons, read and follow these instructions:

1. Use only the battery pack type provided with the unit.
2. Do not dispose of the battery in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery in order not to short the battery with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
5. Recharge only the battery provided with or identified for use with this product. The battery may leak corrosive electrolyte or explode if it is not the correct type.
6. Do not attempt to rejuvenate the battery provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
7. When inserting the battery into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging that may result in leakage or explosion.
8. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during this time the battery could leak in the product.
9. Discard "dead" batteries as soon as possible since dead batteries are more likely to leak in the product.
10. Do not store this product, or the battery provided with or identified for use with this product, in high-temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be stabilized at room temperature prior to use after cold storage.
11. Disconnect telephone lines before installing the battery pack.

DIALING A NUMBER FROM MEMORY

1. If in standby mode, press the memory location button, the stored number will be dialed out directly, or
2. If in Talk mode, press the memory location button, the stored number will be dialed out.

CHANGING A STORED NUMBER

1. Follow the steps described in "Storing Telephone Numbers into Memory."
2. The new phone number will automatically replace the previous one.

LOW BATTERY WARNING

When the handset battery voltage level is low, the battery low icon will be displayed in the LCD. Return the handset to the base for charging.

CID OPERATION

VIEWING INCOMING CALLS

In standby mode, press the CID button to view the caller list; Press "*" (DOWN) or "#" (UP) button to view more callers.

CALL BACK: if you find the desired

number you wish to call back, press TALK button to dial out.

NOTE: You have to dial 0 before pressing "TALK" button if LCD does not display first digit 0 for the long distance call or cellular phone call.

VIEWING OUTGOING DIALED NUMBER

In standby mode, press the REDIAL /PAUSE button to view the list of dialed out numbers, press "*" (DOWN) or "#" (UP) button to view more information.

CALL BACK: if you find a desired

number displayed on caller list, just press TALK button to dial out.

DELETING THE CALLS IN THE CALLER LIST

When viewing the Caller ID information you can delete a single call record or all the call records.

1. Press "*" (DOWN) or "#" (UP) button to find the number you want to delete.
2. Press the DELETE button to erase the selected number.

DELETING ALL RECORDS IN THE CALLER LIST

In caller viewing mode, press and hold the DELETE button around 2 seconds, all the records will be erased.

OTHER SETTINGS

LCD CONTRAST IN HANDSET

This unit enables you to select 8 brightness levels for the LCD display.

In standby mode, enter the digits as follows:

* * 6 X # #, then press and hold the SET button for 2 seconds.

Note: X = the contrast level you want to select from 0 to 7, number 7 is brightest level.

RECEIVING A CALL

1. Pick up the handset from the base
2. Press the TALK button and start conversation with the caller.
- 3.

NOTE: With the use of Caller ID available from your local telephone company, you can see the telephone number of calling party. Also, the LCD can display the time, date, call count, new call and repeat call. You may select whether answer the call.

10 CHANNEL AUTO SCAN

If you are experiencing interference during a phone call, press the CHANNEL button. The unit will scan up to 10 channels and select the clearest one to provide the best possible reception.

MANUAL CHANNEL SCAN

If the existing channel becomes noisy or starts having radio interference, press the CHANNEL button repeatedly until a clearest channel is found.

ENDING A CALL

Since the telephone features "Auto-standby" simply return the cordless handset to the base or press "TALK" if you are away from the base unit.

REVIEWING AND REDIALING

The unit can store and redial the number dialed.

1. Press "REDIAL/PAUSE" button
2. Use "UP" or "DOWN" button to select the desired number
3. Once you get the desired number, just press the TALK button to dial the number displayed.

STORING TELEPHONE NUMBERS INTO MEMORY

1. Ensure the handset is in standby mode
2. Dial the phone number you want to store.
3. Press and hold a memory location where you want to store the phone number. You will hear a confirmation beep.


NOTES:

1. The unit can store up to 32 digits for each phone number.
2. Pause can be programmed into a memory dialing sequence. Each pause occupies one digit. If you are using a switchboard system to access an C/O line, press the PAUSE button on the unit to store a pause.

For example: if you want to store the number 12345678 to M1 in the Handset.

1. Be sure the handset is in standby mode.
2. Press 12345678,
3. Press and hold M1 button 2 seconds, one confirmation beep will be heard.
4. Number 12345678 is now stored in M1.

LOCATION OF CONTROLS

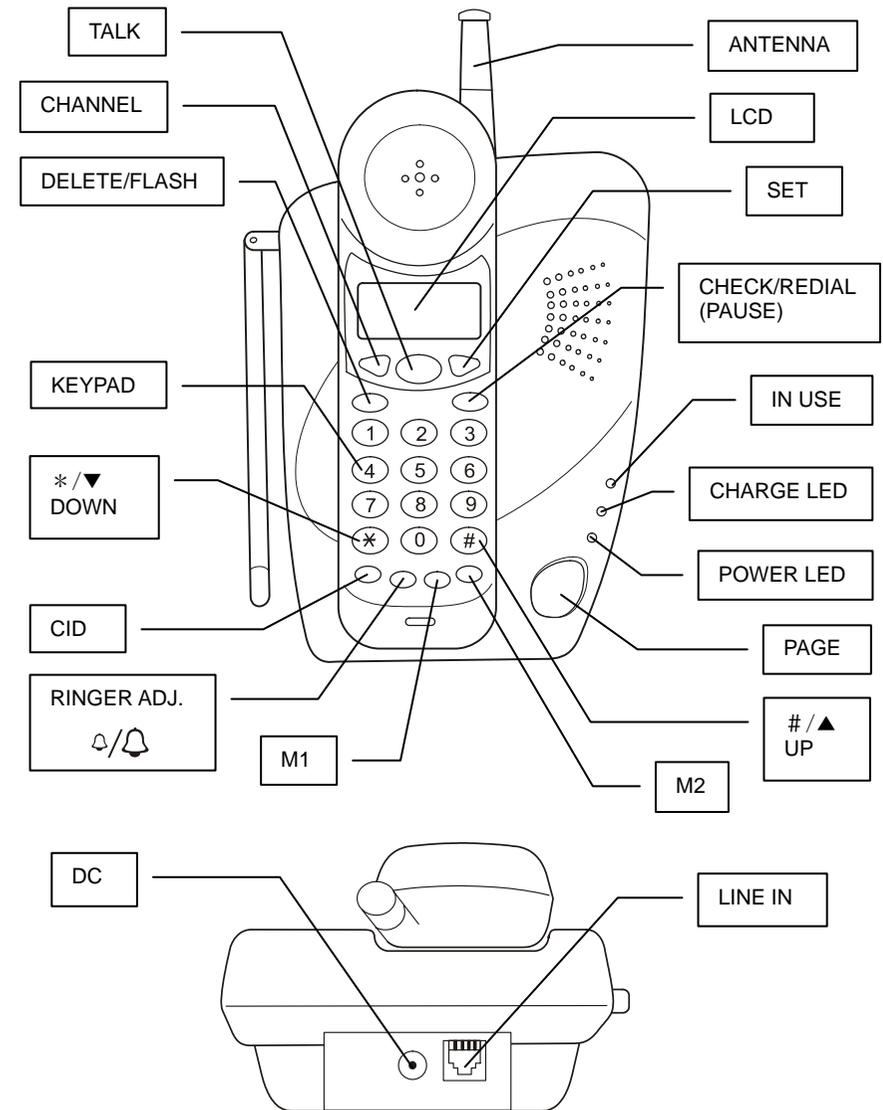

DESCRIPTIONS

CORDLESS HANDSET CONTROLS:

TALK Button - Press this button to make a call, answer a call, or end a call.

CHANNEL Button - (CH) Used to manually select one of the 10 operating channels in talk mode.

CID Button – Used to review Caller ID information stored in memory.

FLASH/DEL Button (FLASH) –Used to access telephone company service or to erase digits on the display, single or multiple entries from the speed dial and Caller ID directions.

Handset Antenna - Telescopic antenna, extend for best reception.

"M1/M2" Button - One touch memory.

REDIAL/PAUSE Button - (Redial)

The telephone will automatically redial the last number dialed. REDIAL/PAUSE is also used to program a measured pause into a dialing sequence stored into a memory location.

SET Button - Used to set timer or initialize the security code for the linking of the cordless handset and the base unit.

Ringer Button – Used to adjust the ringing volume.

***(DOWN) Button** - Used as down function key in setting mode or CID browsing mode.

(UP) Button - Used as UP function button in setting mode or CID browsing mode.

BASE UNIT CONTROLS:

Base Unit Antenna - Raise or reposition for best reception.

PAGE Button – Used to initiate a handset page.

CHARGE LED – Used to illuminate when the handset is properly making contact with the charge terminal.

POWER LED – Used to indicate the power on/off

IN-USE LED – Used to indicate the telephone is in use.

PRE-INSTALLATION NOTES

1. Ensure that the rechargeable battery pack is installed inside the handset battery compartment.
2. It is strongly recommended that the battery be fully charged for at least 12 hours before initial use.
3. Raise the base unit antenna to the upright position to maximize cordless phone operating range and sound quality.

INSTALLATION

CAUTION: USE ONLY THE RECHARGEABLE BATTERY TYPE INCLUDED WITH THIS UNIT, USE OF OTHER BATTERY TYPES MAY CAUSE INJURIES OR DAMAGE.

BATTERY INSTALLATION

1. Remove the battery compartment cover of the handset by pressing the top of the cover and sliding it down.
2. Insert the battery pack into the battery compartment of the handset.
3. Replace the battery compartment cover.

NOTE: Use the type and size of rechargeable battery pack, 3.6V. It is recommended that the battery pack should be fully charged overnight prior to initial use.

POWER CONNECTION



CAUTION: Use only a Class II AC Adaptor with a rating of AC

110V input, DC 6V, 200mA output with a center tip that is positive. The adaptor plug should correctly fit the base unit's DC 6V jack.

1. Plug the AC adaptor into a standard AC outlet.
2. Connect the small adaptor plug into the DC 6V jack on the rear of the base unit.

TELEPHONE OPERATION

Prepare for initial use

TIMER SETTING

In standby mode,

1. Press "SET" button, the mark for Month is flashing. Press UP or DOWN button to select the right digit for month.
2. Press "SET" button again to finish the month setting and start date setting, Press UP or DOWN button to select the right digit for date.
3. Hour and Minute setting is same as above.
4. When caller ID in FSK mode is applied for, the time shall be synchronized with an incoming call.

CODE SETTING

The cordless telephone is preset at factory., If cordless handset loose link with base unit , you need do code setting as:

Both the base and handset are in standby mode.

1. Press "PAGE" button of the base and "SET" key of the handset simultaneously.
2. While two beep sounds are heard, it is to confirm a successful setting.

MAKING A CALL

1. Pick up the handset and press the TALK button. The unit will automatically scan for the best channel available.
2. Once it finds a clear channel, the IN USE icon will be displayed in the LCD and a dial tone will be heard. You can then dial the desired phone number.